

1. Ρύθμιση ενεργοποίησης / απενεργοποίησης

24ωρος χρονοδιακόπτης πρίζας καθημερινής χρήσης.

Αυτός ο χρονοδιακόπτης μπορεί να ρυθμίσει έως 96 εντολές On / Off την ημέρα.

Ρύθμιση προγράμματος: **1 ακίδα ισοδυναμεί με 15 λεπτά.** Προσδιορίστε την επιθυμητή ώρα έναρξης και πιέστε τις ακίδες προς τα κάτω μέχρι τον επιθυμητό χρόνο λήξης. Για παράδειγμα, εάν θέλετε η ηλεκτρική σας συσκευή να λειτουργεί από τις 8:00 π.μ. έως τις 11:00 π.μ. και από τις 13:00 μ.μ. έως τις 17:00 μ.μ. απλά πρέπει να πιέσετε κάτω όλες τις ακίδες στις αντίστοιχες χρονικές περιόδους.

2. Ρύθμιση ώρας:

Ρυθμίστε την τρέχουσα ώρα: Περιστρέψτε τον επιλογέα δεξιόστροφα μέχρι το βέλος να δείξει την τρέχουσα ώρα. Για παράδειγμα, εάν τώρα είναι 8:00 π.μ., γυρίστε τον επιλογέα και βεβαιωθείτε ότι το βέλος δείχνει στο 8. (Δείτε την εικόνα.)

3. Σύνδεση:

Μόλις ρυθμιστούν οι επιθυμητές περίοδοι Ενεργοποίησης / Απενεργοποίησης και η τρέχουσα ώρα, συνδέστε τον χρονοδιακόπτη στην πρίζα και στην συνέχεια συνδέστε την συσκευή στον χρονοδιακόπτη. Βεβαιωθείτε ότι ο χρονοδιακόπτης και η συσκευή είναι ενεργοποιημένα.

Ο χρονοδιακόπτης θα αρχίσει να λειτουργεί και να ενεργοποιεί/απενεργοποιεί την συσκευή σύμφωνα με τις προκαθορισμένες εντολές On/Off

4. Ενεργοποίηση / Απενεργοποίηση

Οι εντολές On/Off μπορούν να διακοπούν χρησιμοποιώντας τον χειροκίνητο διακόπτη που βρίσκεται στο πλάι της μονάδας. Όταν μεταβείτε στην θέση "I", η ηλεκτρική συσκευή είναι πάντα ενεργοποιημένη και η λειτουργία χρονοδιακόπτη δεν λειτουργεί.

5. Προδιαγραφές:

Παροχή ηλεκτρικού ρεύματος: 240V, ~50Hz

MAX Watt: 3.120Watt

Ένταση ρεύματος: 13(4)A

θερμοκρασία λειτουργίας: -10°C - +55°C

6. Προφυλάξεις



Μόνο για εσωτερική χρήση

Μην το χρησιμοποιείτε με καμία συσκευή η οποία υπερβαίνει την τάση του χρονοδιακόπτη

Πρέπει να επαναφέρετε την τρέχουσα ώρα μετά από διακοπή ρεύματος.

Μην αποσυναρμολογείτε μόνοι σας τον χρονοδιακόπτη. Ζητήστε βοήθεια από εξουσιοδοτημένο τεχνικό.

Εάν πρέπει να καθαρίσετε τον χρονοδιακόπτη, αφαιρέστε τον από το ρεύμα και σκουπίστε με ένα στεγνό πανί. ΜΗΝ βυθίζετε σε νερό ή υγρό.

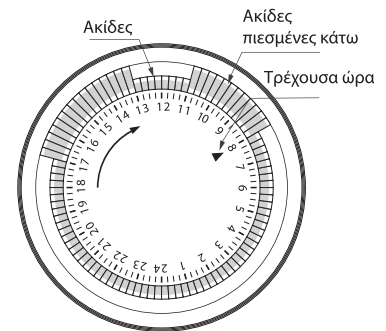

CE ΣΩΣΤΗ ΔΙΑΘΕΣΗ ΑΥΤΟΥ ΤΟΥ ΠΡΟΪΟΝΤΟΣ



Αυτή η σήμανση υποδηλώνει ότι το προϊόν αυτό δεν πρέπει να διατεθεί μαζί με άλλα οικιακά απορρίμματα σε όλη την ΕΕ. Για να αποφευχθεί πιθανή βλάβη στο περιβάλλον ή την ανθρώπινη υγεία από την ανεξέλεγκτη διάθεση των αποβλήτων, ανακυκλώστε την υπεύθυνα για την προώθηση της βιώσιμης επαναχρησιμοποίησης των υλικών πόρων. Για να επιστρέψετε τη χρησιμοποιημένη συσκευή σας, χρησιμοποιήστε τα συστήματα επιστροφής και συλλογής ή επικοινωνήστε με τον πωλητή όπου αγοράστηκε το προϊόν. Μπορούν να πάρουν αυτό το προϊόν για ασφαλή περιβαλλοντική ανακύκλωση.



UK TIMER SWITCH 24H 13A 240V WITH SHUTTER PROTECTION IP20

147-35002 // TE-63A

EUROLAMP®

Electrical Equipment

1. Activation / deactivation setting:

24-hour daily socket timer.

This timer can set up to 96 On / Off commands per day

Set program: **1 pin is equivalent to 15 minutes.** Determine desired start time and push down pins until desired off time.

For instance, if you want electrical devices to work from 8:00am to 11:00am and from 13:00pm to 17:00pm, you just need to put down all the pins in the respective time periods

2. Time setting:

Set the current time: Turning the dial clockwise until the arrow pointing to current time.

For example, if now it is 8:00 am, please turn the dial and make sure the arrow points to 8. (See the picture.)

3. Connection

Once the desired activation/deactivation periods and the current time are set, plug the timer into the wall socket and then plug the device into the timer.

Make sure the timer and the appliance are switched on.

The timer will start operating and switching the device On/Off according to the setting program commands.

4. Manual On/Off

On/off commands can be interrupted by using the manual override switch located on the side of the unit. When you switch to the "I" position, the electrical device is always power-on and the timer function no work.

5. Specifications:

Power Supply: 240V, ~ 50Hz

MAX Watt: 3,120Watt

Current: 13(4)A

Operating temperature: -10°C - +55°C

6. Precautions:


For indoor use only

Do not use with any device that exceeds the timer voltage

Must reset the current time after power failure.

Do not disassemble timer by yourself. Professionals service are needed for maintenance.

If you need to clean the timer, unplug it and wipe it with a dry cloth. DO NOT immerse in water or liquid.

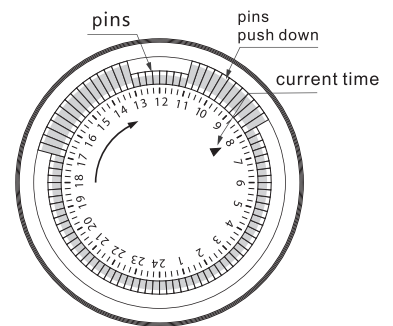

I — Normal open
⌚ — timing



CORRECT DISPOSAL OF THIS PRODUCT

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



• IMPORTED IN EU BY EUROLAMP SA: KAMPOS DIAVATA - IONIA / 570 08 / THESSALONIKI - GREECE / T: +30 2310 574802

• MADE IN CHINA

info@eurolamp.gr / www.eurolampglobal.com